


USER'S PRECAUTION WHEN OPERATING THE DEHUMIDIFIER


ALL USERS SHOULD READ THIS PAGE AND THE OPERATING MANUAL (THE MANUAL IS SANDWICHED BETWEEN THE UPPER WHITE PACKAGING FOAM AND THE CARTON BOX)

- 1) ENSURE THAT THE RIGHT VOLTAGE AND FREQUENCY IS USED. (220-240 VAC 50 HZ)
- 2) NEVER TILT THE UNIT AT AN ANGLE OR PUT IT IN A HORIZONTAL POSITION AT ALL TIME BE IT OPERATING OR NOT. DO NOT DRAG THE UNIT OVER VERY ROUGH SURFACE AS THIS MAY DAMAGE THE WHEELS
- 3) **DO NOT PLACE THE UNIT TOO NEAR THE WALL. ENSURE THAT THERE IS AT LEAST 150 mm (6 inches) SPACE BETWEEN THE BACK OF THE DEHUMIDIFIER FROM THE WALL SO THAT AIR FLOW IS NOT AFFECTED. ENSURE THAT THERE IS PLENTY OF FREE SPACE (AT LEAST 1.5 METER , or 5 Feet) IN FRONT OF THE DEHUMIDIFIER. DO NOT USE THIS UNIT TO COVER MORE THAN 80 SQ METER BY 4 METER SPACE UNLESS SPECIAL RECOMMENDATION GIVEN.**
- 4) **THE MACHINE IS DESIGNED FOR ENCLOSED SPACE USAGE ONLY. DOORS AND WINDOWS ARE TO BE CLOSED FOR THE DEHUMIDIFIER TO OPERATE NORMALLY. OPEN WINDOWS / DOORS INCREASE EXCESS WORK LOAD ON THE MACHINE AND WILL CAUSE DAMAGE BY OVER LOADING THE MACHINE. DO NOT OPERATE THE UNIT IN A SPACE MUCH LARGER THAN IS RECOMMENDED AS IT CAN SHORTEN ITS DESIGNED LIFE SPAN. DO NOT SET THE CONTROL AT "DRY" - "ON" OR "CONTINUOUS" FOR MORE THAN 2 DAYS.**
- 5) CLEAN THE AIR FILTER EVERY MONTH SO THAT AIR CIRCULATION IS NOT HINDERED BY THICK DUST FORMED. DUST CHOKED AIR FLOW WHICH CAUSES OVERHEATING.
- 6) DO NOT OPERATE THE DEHUMIDIFIER ABOVE 35 DEGREE C / WARM PLACE. DO NOT USE IT IN A DUSTY OR CHEMICAL ENVIRONMENT OR UNDER DIRECT SUNLIGHT OR RAIN.
- 7) DO NOT SHIFT THE MACHINE FROM A VERY COLD ROOM TO A WARM ROOM IMMEDIATELY. AS WATER DROPLETS MAY FORM ON THE ELECTRONICS INSIDE. IF SUCH SHIFT HAS TO BE DONE, FIRST WRAP THE UNIT IN A LARGE PLASTIC SHEET / BAG WHILE IT WAS IN THE COLD ROOM. SHIFT IT OVER AND DO NOT OPEN IT UP FOR THE NEXT FIVE HOURS.
- 8) IF DRAINAGE PIPE IS USED, THE PIPE MUST BE AT A LOWER LEVEL THAN THE WATER OUTLET OF THE DEHUMIDIFIER.

WARRANTY DOES NOT COVER DAMAGE CAUSED BY ANY OF THE ABOVE REASONS.

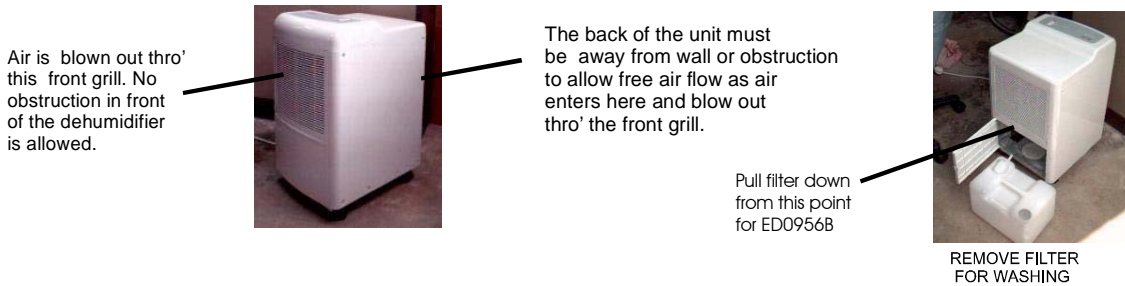

HOW TO INSTALL A DRAIN HOSE

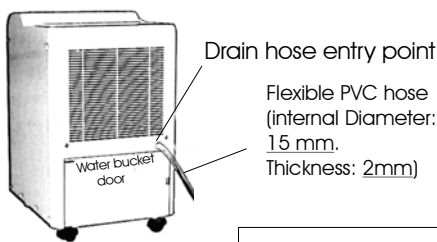

Flexible PVC hose
(internal Diameter:
15 mm.
Thickness: 2mm)

